

Date : 2019/10/03

Page: 1 of 9

TAIYO YUDEN CO., LTD. 8-1, SAKAE-CHO, TAKASAKI-SHI, GUNMA, JAPAN

### The following samples was/were submitted and identified by/on behalf of the applicant as :

Sample Submitted By	:	TAIYO YUDEN CO., LTD.
Sample Description	:	CERAMIC MATERIALS
Style/Item No.	:	A-17
Sample Receiving Date	:	2019/09/27
Testing Period	:	2019/09/27 to 2019/10/03

2

### Test Requested

- As specified by client, with reference to RoHS 2011/65/EU Annex II and amending Directive (EU) 2015/863 to determine Cadmium, Lead, Mercury, Cr(VI), PBBs, PBDEs, DBP, BBP, DEHP, DIBP contents in the submitted sample(s).
- (2) Please refer to next pages for the other item(s).

Test Result(s)

: Please refer to following pages.

Troy Chang / Manager -Signed for and behalf of SGS TAIWAN LTD. Chemical Laboratory - Taipei



Date : 2019/10/03

Page: 2 of 9

TAIYO YUDEN CO., LTD.

8-1, SAKAE-CHO, TAKASAKI-SHI, GUNMA, JAPAN

### Test Result(s)

PART NAME No.1 : DK.BROWN LUMP

Test Item(s)	Unit	Method	MDL	Result No.1
Cadmium (Cd)	mg/kg	With reference to IEC 62321-5 (2013) and	2	n.d.
Lead (Pb)	mg/kg	performed by ICP-OES.	2	n.d.
Mercury (Hg)	mg/kg	With reference to IEC 62321-4:2013+ AMD1:2017 and performed by ICP-OES.	2	n.d.
Hexavalent Chromium Cr(VI)	mg/kg	With reference to IEC 62321-7-2 (2017) and performed by UV-VIS.	8	n.d.
Sum of PBBs	mg/kg		-	n.d.
Monobromobiphenyl	mg/kg		5	n.d.
Dibromobiphenyl	mg/kg	1	5	n.d.
Tribromobiphenyl	mg/kg		5	n.d.
Tetrabromobiphenyl	mg/kg		5	n.d.
Pentabromobiphenyl	mg/kg		5	n.d.
Hexabromobiphenyl	mg/kg		5	n.d.
Heptabromobiphenyl	mg/kg	With reference to IEC 62321-6 (2015) and performed by GC/MS.	5	n.d.
Octabromobiphenyl	mg/kg		5	n.d.
Nonabromobiphenyl	mg/kg		5	n.d.
Decabromobiphenyl	mg/kg		5	n.d.
Sum of PBDEs	mg/kg		-	n.d.
Monobromodiphenyl ether	mg/kg		5	n.d.
Dibromodiphenyl ether	mg/kg		5	n.d.
Tribromodiphenyl ether	mg/kg		5	n.d.
Tetrabromodiphenyl ether	mg/kg		5	n.d.
Pentabromodiphenyl ether	mg/kg		5	n.d.
Hexabromodiphenyl ether	mg/kg		5	n.d.
Heptabromodiphenyl ether	mg/kg		5	n.d.
Octabromodiphenyl ether	mg/kg		5	n.d.
Nonabromodiphenyl ether	mg/kg		5	n.d.
Decabromodiphenyl ether	mg/kg		5	n.d.



Date : 2019/10/03

Page: 3 of 9

TAIYO YUDEN CO., LTD.

8-1, SAKAE-CHO, TAKASAKI-SHI, GUNMA, JAPAN

Test Item(s)	Unit	Method	MDI	Result
			MDL	No.1
BBP (Butyl Benzyl phthalate) (CAS No.: 85-68-7)	mg/kg		50	n.d.
DBP (Dibutyl phthalate) (CAS No.: 84-74-2)	mg/kg	With reference to IEC 62321-8 (2017). Analysis was performed by GC/MS.	50	n.d.
DEHP (Di- (2-ethylhexyl) phthalate) (CAS No.: 117-81-7)	mg/kg		50	n.d.
DIBP (Di-isobutyl phthalate) (CAS No.: 84-69-5)	mg/kg		50	n.d.
DIDP (Di-isodecyl phthalate) (CAS No.: 26761-40-0; 68515-49-1)	mg/kg		50	n.d.
DINP (Di-isononyl phthalate) (CAS No.: 28553-12-0; 68515-48-0)	mg/kg		50	n.d.
DNOP (Di-n-octyl phthalate) (CAS No.: 117-84-0)	mg/kg		50	n.d.
Halogen-Chlorine (Cl) (CAS No.: 22537-15-1)	mg/kg	With reference to BS EN 14582 (2016).	50	n.d.
Halogen-Bromine (Br) (CAS No.: 10097-32-2)	mg/kg		50	n.d.
Antimony (Sb)	mg/kg	With reference to US EPA 3052 (1996). Analysis was performed by ICP-OES.	2	n.d.
Phosphorus (P)	mg/kg		2	n.d.
Beryllium (Be)	mg/kg		2	n.d.
Arsenic (As)	mg/kg		2	n.d.

Note :

1. mg/kg = ppm ; 0.1wt% = 1000ppm

2. MDL = Method Detection Limit

- 3. n.d. = Not Detected = less than MDL
- 4. " " = Not Regulated



Date : 2019/10/03

Page: 4 of 9

TAIYO YUDEN CO., LTD.


8-1, SAKAE-CHO, TAKASAKI-SHI, GUNMA, JAPAN

### Analytical flow chart of Heavy Metal

These samples were dissolved totally by pre-conditioning method according to below flow chart. (Cr<sup>6+</sup> test method excluded)

Technician : Rita Chen



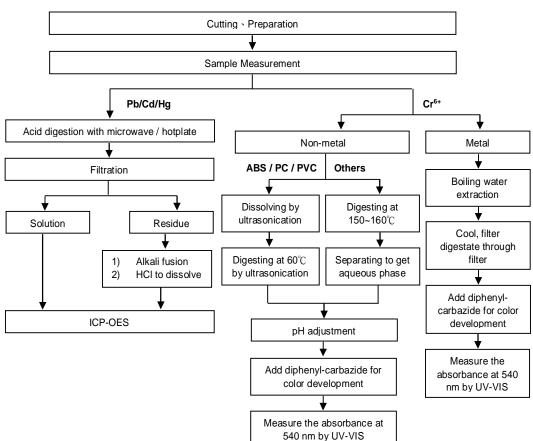




Date : 2019/10/03

Page: 5 of 9

TAIYO YUDEN CO., LTD. 8-1, SAKAE-CHO, TAKASAKI-SHI, GUNMA, JAPAN

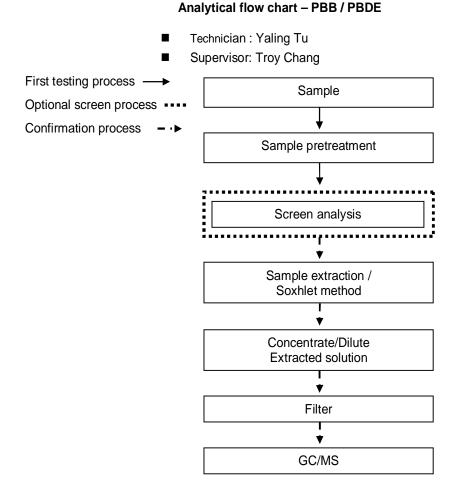



Date : 2019/10/03


Page: 6 of 9

TAIYO YUDEN CO., LTD. 8-1, SAKAE-CHO, TAKASAKI-SHI, GUNMA, JAPAN

### Analytical flow chart - Phthalate

- Technician: Yaling Tu
- Supervisor: Troy Chang

### [Test method: IEC 62321-8]

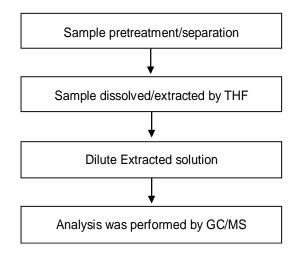




Date : 2019/10/03

Page: 7 of 9

TAIYO YUDEN CO., LTD. 8-1, SAKAE-CHO, TAKASAKI-SHI, GUNMA, JAPAN

### Analytical flow chart - Halogen

- Technician: Rita Chen
- Supervisor: Troy Chang

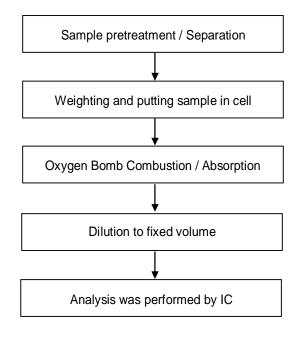



Date : 2019/10/03


Page: 8 of 9

TAIYO YUDEN CO., LTD. 8-1, SAKAE-CHO, TAKASAKI-SHI, GUNMA, JAPAN

These samples were dissolved totally by pre-conditioning method according to below flow chart.

- Technician: Rita Chen
- Supervisor: Troy Chang

Flow Chart of digestion for the elements analysis performed by ICP-OES

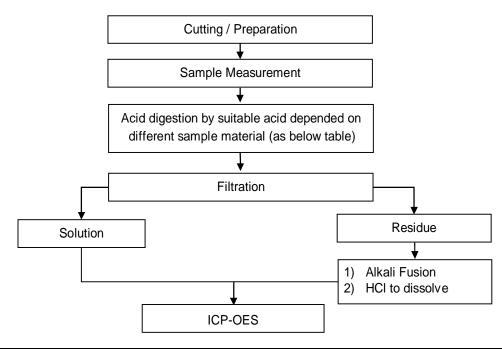

Steel, copper, aluminum, solder	Aqua regia, HNO <sub>3</sub> , HCI, HF, H <sub>2</sub> O <sub>2</sub>
Glass	HNO <sub>3</sub> /HF
Gold, platinum, palladium, ceramic	Aqua regia
Silver	HNO <sub>3</sub>
Plastic	H <sub>2</sub> SO <sub>4</sub> , H <sub>2</sub> O <sub>2</sub> , HNO <sub>3</sub> , HCI
Others	Added appropriate reagent to total digestion




Date : 2019/10/03

Page: 9 of 9

TAIYO YUDEN CO., LTD. 8-1, SAKAE-CHO, TAKASAKI-SHI, GUNMA, JAPAN

\* The tested sample / part is marked by an arrow if it's shown on the photo. \*

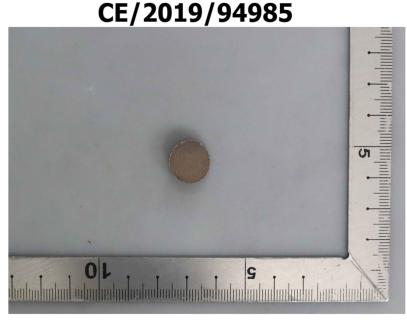

\*\* End of Report \*\*